BRETFORD

AOH2741 Adjustable Overhead Projector Table

Assembly Instructions

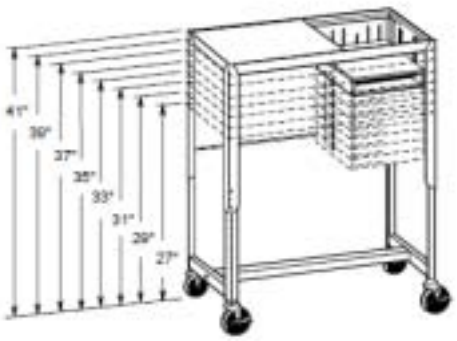

Please read these Instructions thoroughly before assembling your new Bretford product.

STEP 1

Secure the two Leg Assemblies **(B)** together with the Connection Bar **(F)** by using (2) Hex Head Screws **(EE)** and (2) Lock Nuts **(CC)**. This makes the H-Frame bottom section.

Lay the table on a clean flat suface with the top section **(A)** flat and the H-Frame bottom section facing up. (See figure 1) The table is height-adjustable from 27" to 41" (with casters installed). To assemble, pull the lower section of the table up to the desired height, insert a 3/4" round head screw **(AA)** into the height-adjustment hole from the outside and fasten with a square nut **(BB)**. Install remaining screws and nuts to all other legs of the table. Tighten securely.

STEP 2

Insert the casters **(C,D)** into the sockets at the base of each leg.

STEP 3

The projector shelf has been pre-assembled at the factory but can be adjusted to the desired height once the table is assembled. To adjust the projector shelf **(E)**, determine the desired height, remove the screws **(DD)** holding the shelf in place, slide the shelf into position, and replace the screws. *(See figure 2)* Tighten all screws securely before placing your overhead projector in position. Attach the optional electrical unit assembly to the table using the screws and wing nuts provided.

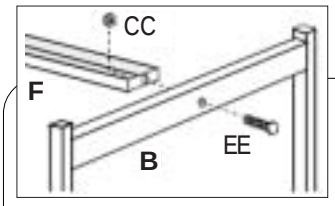

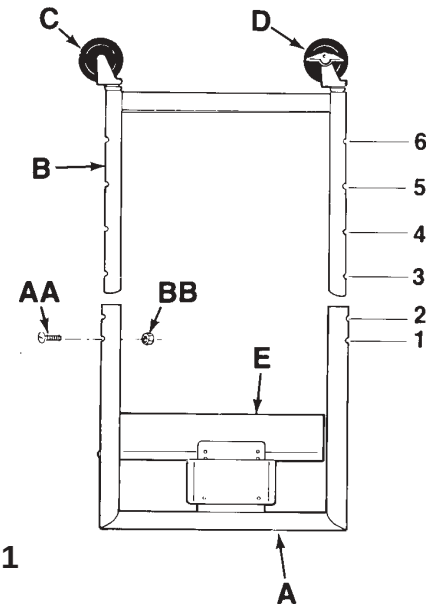

Fig. 1

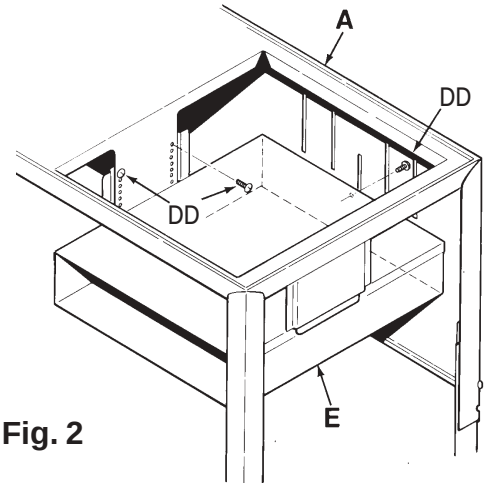

Fig. 2

PARTS LIST

	QTY	PART NUMBER	DESCRIPTION
A	(1)	022-1695	Top Section Assembly
B	(2)	022-1694	Side Leg Assemblies
C	(2)	015-0002	4" Swivel Caster
D	(2)	015-0003	4" Swivel Caster with brake
E	(1)	022-1638	Projector Shelf Assembly
F	(1)	010-2336	Leg Assembly Connecting Bar

HARDWARE

	QTY	PART NUMBER	DESCRIPTION
AA	(8)	030-0253	3/4" Combo. Round Head Screw
BB	(8)	030-0120	1/4-20 Square Nut
CC	(2)	030-0421	5/16-18 Hex Lock Nut
DD	(5)*	030-0325	1/2" Combo Truss Head Screw
EE	(2)	030-0307	5/16-18 x 5/8" Hex Head MS

**installed in projector shelf at factory*

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
Technology House
7 Lake End Court, Taplow
Bucks SL6 0JQ England
TEL: 01628 603558
FAX: 01628 604923

www.bretford.com

Part#031-1841
Rev.12.10.09CZ